

## COPY ROLLING CODE NORMAL REMOTES with AIR4 F



1

PRESS AND HOLD DOWN **BUTTON 1** ON THE "AIR4".



2

AT THE SAME TIME PRESS **BUTTON 4** FOUR TIME.

3

RELEASE BOTH BUTTONS OF "AIR4".




4

"AIR4" REMOTE CONTROL LED
WILL FLASH BRIEFLY ABOUT EVERY
2 SEC.

5

PLACE THE REMOTE CONTROL TO BE CLONED BACK TO BACK WITH THE "AIR4".

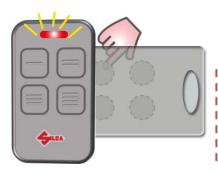

6

PRESS AND HOLD DOWN THE BUTTON TO BE COPIED FRON THE ORIGINAL REMOTE CONTROL.

7

WAIT FOR THE "AIR4" LED TO START FLASHING RAPIDLY, WHICH CONFIRMS THAT THE CODE HAS BEEN ACQUIRED. RELEASE THE ORIGINAL REMOTE CONTROL'S BUTTON.



ጸ

WHILE THE LED IS FLASHING, PRESS
THE "AIR4" BUTTON TO WHICH
THE CODE MUST BE TRANSFERRED
AND HOLD DOWN UNTIL THE LED
GOES OUT.

NOTE: A PROCEDURE IS REQUIRED ON THE RECEIVER (A.L.S / ORIGINAL PROCEDURE)