



ROLLING SECURE LEARNING REMOTES with BFT MITTO - AIR4 F

 
Air⁴

1-HOLD DOWN BUTTON 1 ON THE AIR4 REMOTE CONTROL.

2-AT THE SAME TIME PRESS BUTTON 4 FOUR TIMES



7-WAIT FOR THE "AIR4" LED TO GO ON WITHOUT FLASHING ,RELEASE BUTTON AND THEN START DOUBLE FLASHING ABOUT EVERY 2 SECONDS .

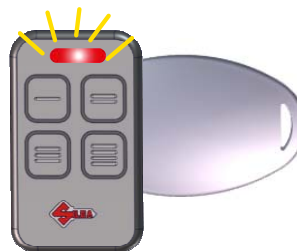


3-RELEASE BOTH BUTTONS.

4-THE AIR4 WILL FLASH BRIEFLY ABOUT EVERY 2 SEC.



 8-SIMULTANEOUSLY PRESS THE TWO BUTTONS 1 AND 2 ON THE BFT REMOTE CONTROL AND RELEASE AS SOONN AS THE LED STARTS FLASHING.(TRASMISSION OF SOURCE CODE).

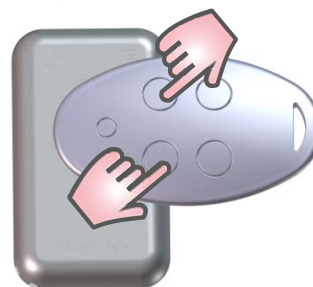

5-PLACE THE REMOTE CONTROL TO BE CLONED BACK TO BACK WITH "AIR4".



6-HOLD DOWN THE ORIGINAL REMOTE CONTROL BUTTON TO BE COPIED .

NOTA: *On older versions of BFT MITTO instead of pressing the two buttons simultaneously, use a pin to press the concealed button on the back of the remote control.*



9-THE "AIR4" LED WILL FLASH RAPIDLY; PRESS THE BUTTON BY WHICH THE CODE WILL BE MEMORISED AND HOLD DOWN UNTIL THE LED GOES OUT.



NOTE: A PROCEDURE IS REQUIRED ON THE RECEIVER (A.L.S OR ORIGINAL PROCEDURE)