



ROLLING SECURE LEARNING REMOTES

FAAC 868 MASTER with AIR4 V

Air⁴

1-PLACE THE RADIO CONTROL TO BE CLONED IN FRONT OF "AIR4" AT A DISTANCE OF ABOUT 4/5 CM.



2-HOLD DOWN BUTTON 1 ON "AIR4".

3-AT THE SAME TIME PRESS BUTTON 4 FOUR TIMES.

 


4-RELEASE BOTH BUTTONS ON "AIR4".


5-AIR4 LED WILL FLASH BRIEFLY ABOUT EVERY 2 SECONDS.




7-SIMULTANEOUSLY PRESS THE TWO BUTTONS 1 AND 2 ON THE FAAC REMOTE CONTROL AND RELEASE AS SOON AS THE LED BEGINS TO FLASH. (TRANSMISSION OF SOURCE CODE).

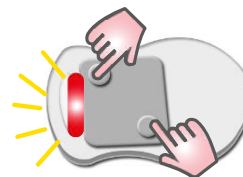

 
8-WHILE THE FAAC REMOTE CONTROL IS FLASHING PRESS ONCE TIME THE BUTTON TO BE COPIED.

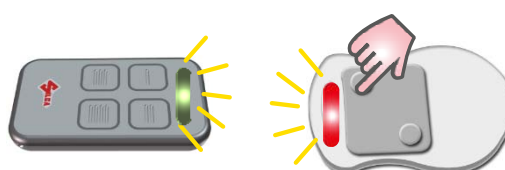

 6-HOLD DOWN THE BUTTON ON THE ORIGINALE REMOTE CONTROL TO BE COPIED. WAIT FOR THE "AIR4" LED TO GO ON WITHOUT FLASHING, RELEASE BUTTON AND THEN START DOUBLE FLASHING ABOUT EVERY 2 SECONDS.

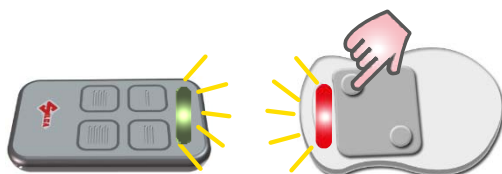

 9-THE LED WILL THEN FLASH RAPIDLY, PRESS THE BUTTON ON WHICH THE CODE WILL BE SAVED AND HOLD DOWN UNTIL THE LED GOES OUT.

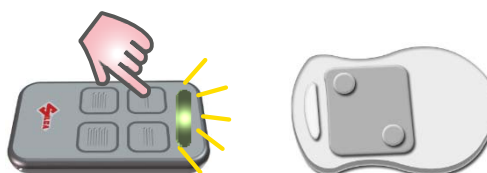

10-APPROACH THE AUTOMATION AND PRESS THE "AIR4" REMOTE CONTROL REPEATEDLY UNTIL THE AUTOMATION ACTIVATES.

